

0B-14 Maintenance and Lubrication:

Clutch Cable Play Inspection and Adjustment

B838H20206015


Inspect clutch cable play

Every 6 000 km (4 000 miles, 12 months)

Inspect and adjust the clutch cable play "a" as follows.


Clutch cable play "a"

10 – 15 mm (0.4 – 0.6 in)

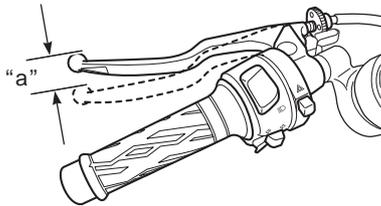


I837H1020029-01

- 1) Lift and support the fuel tank. Refer to "Fuel Tank Removal and Installation in Section 1G (Page 1G-9)".
- 2) Turn in the adjuster (1) all the way into the clutch lever assembly.

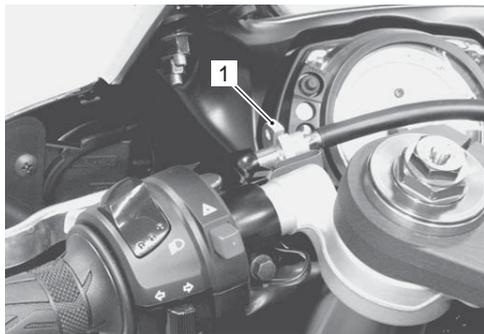

I837H1020030-01


- 3) Loosen the lock-nut (2) and turn the clutch cable adjuster (3) to obtain proper cable play.

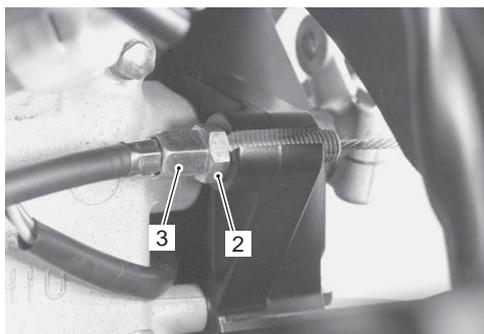

I837H1020031-01


- 4) Remove the clutch release adjuster cap (4).

- 5) Loosen the lock-nut (5) and turn out the adjusting screw (6) two or three rotations.
- 6) From that position, slowly turn in the adjusting screw (6) until resistance is felt.
- 7) From this position, turn out the adjusting screw (6) 1/2 rotation, and tighten the lock-nut (5) while holding the screw (6).

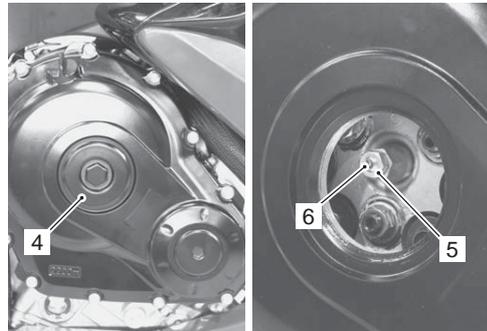

I837H1020032-02

- 8) Turn the cable adjuster (3) to obtain 10 – 15 mm (0.4 – 0.6 in) of free play "a" at the clutch lever end.
- 9) Tighten the lock-nut (2).

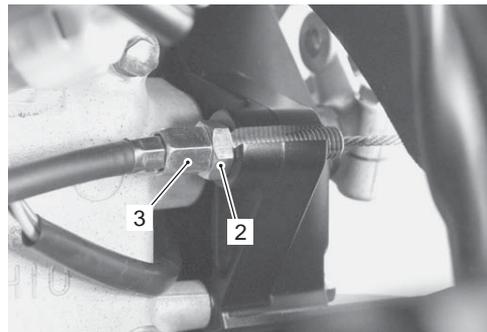

I837H1020033-01

- 10) Reinstall the fuel tank.