


Schematic and Routing Diagram

Fuel Tank Drain Hose and Breather Hose Routing Diagram

B838H21702001

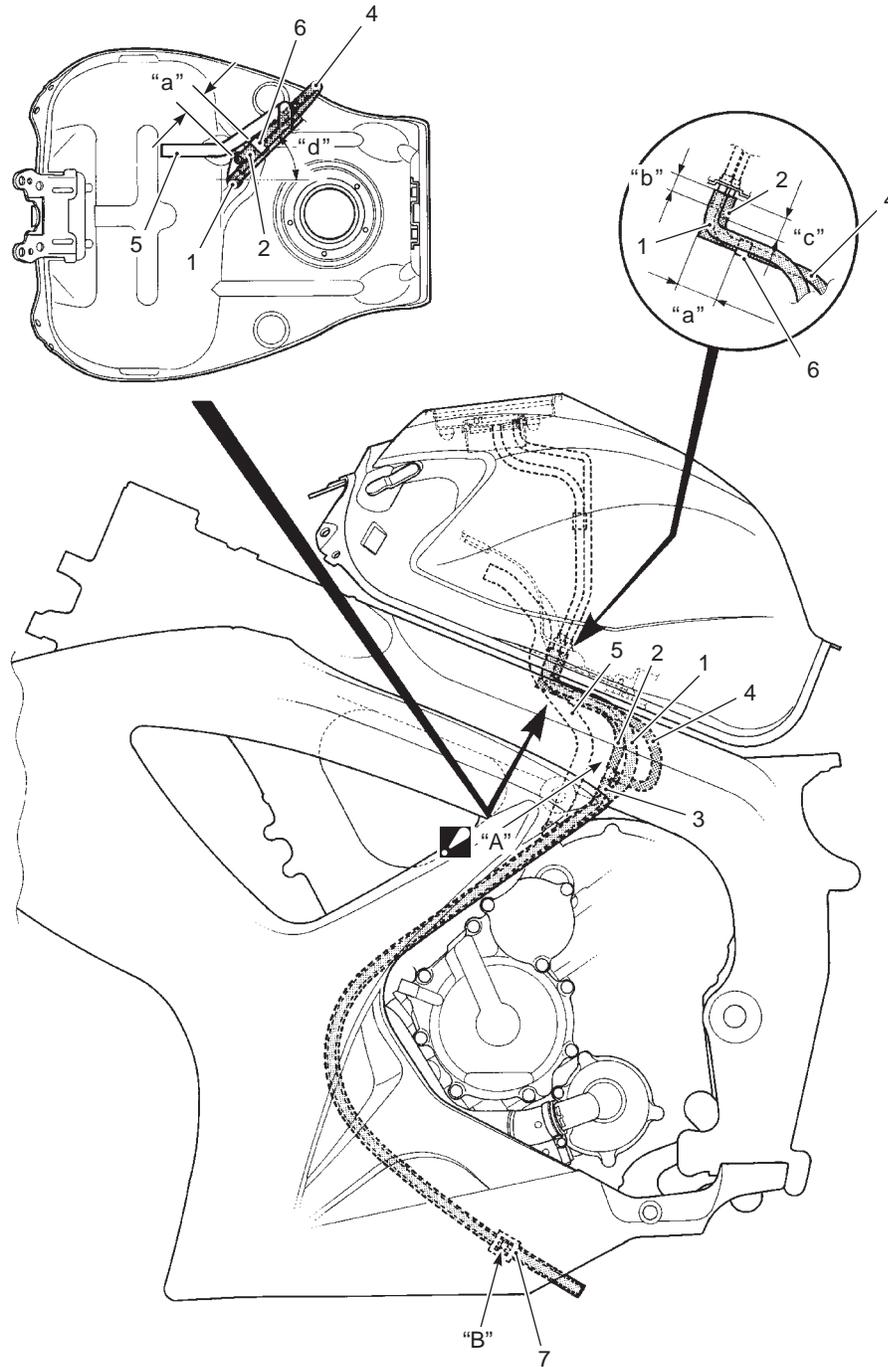

I837H1170001-03

| | | |
|--|---|---------------------|
| 1. Fuel tank water drain hose | 6. Breather hose clamp (Except for E-33) | "b": 13 mm (0.5 in) |
| 2. Fuel tank breather hose No. 1 (Except for E-33) | 7. Drain hose clamp | "c": 19 mm (0.7 in) |
| 3. Fuel tank breather hose No. 2 | ▣ "A": Pass the fuel tank water drain hose. | "d": 45° |
| 4. Fuel tank breather hose No. 3 (Except for E-33) | "B": White marking | |
| 5. Crankcase breather (PCV) hose | "a": 30 ± 10 mm (1.2 ± 0.4 in) | |